

## Futurehome Smart Termostart PR Brukermanual - NO

## Beskrivelse av skjermindikatorer

- a. ZigBee-ikon. ZigBee-ikonet vil blinke når termostaten søker etter nettverk og lyser når den er tilkoblet.
- b. Klokkeslett. Dette settes automatisk etter kort tid ved tilkobling til Futurehome Smarthub.
- c. Hjemme og Bortreist modus.
- d. Indikator for varme av/på. Dersom termostaten varmer opp gulvet vil strekene bevege seg mot høyre. Hvis maksvokter brukes, blinker strekene hvis temperaturgrensen overskrides.
- e. Indikator blinker når åpent vindu detekteres.
- f. Indikator for Manuell / Auto.
- g. Indikerer at temperaturen settes.
- h. Indikator for aktiv barnesikring/knappelås.

⏻ Av/på-knapp

⊕ Øk temp

⊖ Reduser temp

⋮ Modus-knapp

## Zigbee inkludering

For å styre termostaten eksternt må den legges til i en ZigBee gateway

1. Start prosessen med å legge til nye enheter på din ZigBee-gateway og følg anvisningene.
2. For å sette termostaten i paringsmodus: Langt trykk '⏻' til ZigBee ikonet blinker.
3. Fortsett prosessen med å legge til nye enheter i appen.

## Avanserte innstillinger

Når termostaten er påslått, trykker du lenge på '+' og '-' (5s) samtidig for å åpne avanserte innstillinger.

1. Sensor type  
00: Luftføler / Intern 01: Gulvføler / Ekstern  
02: Maksvokter / regulerer på lufttemperatur og begrenser med gulvføler
2. Gulvfølertype / Ekstern:  
0: 10 kOhm | 1: 12 kOhm | 2: 15 kOhm | 3: 47 kOhm
3. Maksvoktertemperatur: Denne må settes i termostaten. 20-95°C, Standard er 27°C, '--' Ingenbegrensning.
4. Sving: 1-9°C, Standard 2°C
5. Kalibrering: -9 til +9°C, Standard er 0°C
6. Høyeste setpunkt: 35-90°C, Standard er 35°C
7. Laveste setpunkt: 0-30°C, Standard er 5°C
8. Setpunkt for hjemmemodus: Standard er 22°C
9. Setpunkt for bortreist modus: Standard er 15°C
10. Lysstyrke på hvilemodus: 1-10, standard er 1
11. Åpent vindu deteksjon: 0 = Deaktivert / 1 = Aktiv
12. Omstart av systemet:  
Trykk på '+' eller '-' for å bytte '--' til '==' og vent i 5s
13. Fabrikkinnstilling  
Trykk på '+' eller '-' for å bytte '--' til '==' og vent i 5s

- Du kan endre innstillinger med '+' eller '-'
- Trykk ':' for å velge innstillingene og gå videre.
- For å lagre endringene og gå ut av avanserte innstillinger trykkes '⏻'

## Funksjoner

Knapp	Kort trykk	Langt trykk
⏻	Bekreft/gå tilbake	Slå AV/PÅ
⊕	Temperatur økning	Gå inn i meny
⊖	Temperatur senkning	Start ZigBee paring
⋮	Veksle mellom hjemme og bortreist modus	Vis dato i MM/DD format
Langt trykk '⊕' og '⊖': Åpne avanserte innstillinger		
Langt trykk '⊖' og '⋮': Lås/lås opp		

### Maksvokter funksjon:

Meny 1 / 02 Maksvokter. Gulvføler må være installert. Termostaten vil regulere etter romføleren, men avbryte oppvarming dersom gulvføleren overstiger maksvoktertemperatur. Standard er 27°C. Denne innstillingen kan endres under Meny 3.

Det er også maksvokter når termostaten innstilt på gulvføler. Termostaten regulerer etter gulvføleren, men vil avbryte oppvarming dersom gulvføleren overstiger maksvoktertemperatur. Standard er 27°C. Denne innstillingen kan endres under Meny 3.

### For å styre termostaten eksternt må den legges til i en ZigBee gateway


1. Start prosessen med å legge til nye enheter på din ZigBee-gateway og følg anvisningene.
2. For å sette termostaten i paringsmodus: Langt trykk '⏻' til ZigBee ikonet blinker
3. Fortsett prosessen med å legge til nye enheter i appen.

## Elektriske data

- Driftsspenning : 230 V / 50 Hz
- Kurssikring : Maks 16 A
- Belastning : Max 3600W
- 1-polet elektronisk relé
- Intern strømforsyning med galvanisk skille.
- Må ikke benytte selvregulerende varmekabel
- Må ikke benyttes til kontaktorstyring

Futurehome AS

Trykboks 72, 0801 Oslo, Norge

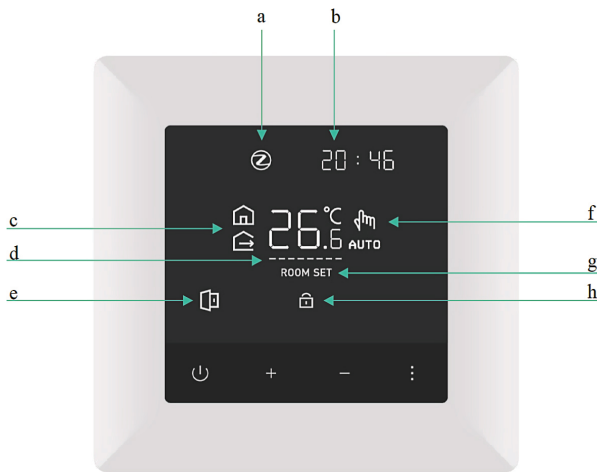

Futurehome Smart Thermostat PR  
User Manual - EN

## Description of screen indicators

- a. ZigBee icon. The ZigBee icon will flash when the thermostat searches for networks and lights up when connected.
- b. Time. This is set automatically after a short time when connected to the Futurehome Smarthub.
- c. Home and Away mode.
- d. Heating on / off indicator. If the thermostat heats the floor, the lines will move to the right. If maximum guard is used the lines flash if the temperature limit is exceeded.
- e. Indicator flashes when open window is detected.
- f. Manual / Auto indicator.
- g. Indicates that the temperature is set.
- h. Indicator for active child lock / button lock.

⏻ On/Off button

⊕ Inc. temp

⊖ Lower temp

⋮ Mode button

## Zigbee pairing

To control the thermostat remotely it must be added to a ZigBee gateway

1. Start the process of adding new devices to your ZigBee gateway and follow the instructions.
2. To put the thermostat in pairing mode: Long press '⏻' until the ZigBee icon flashes.
3. Continue the process of adding new devices to the app.

## Advanced settings

When the thermostat is on, press and hold '⊕' and '⊖' (5s) simultaneously to open advanced settings.

1. Sensor type  
00: Air sensor / Internal 01: Floor sensor / External  
02: Max guard / regulator on air temperature and limiter with floor sensor
2. Floor sensor type / External:  
0: 10 kOhm | 1: 12 kOhm | 2: 15 kOhm | 3: 47 kOhm
3. Max Guarding Temperature: This must be set in the thermostat.  
20-95 °C, Standard is 27 °C, '⏻' No limit.
4. Turn: 1-9 °C, Standard is 2 °C
5. Calibration: -9 to +9 °C, Standard is 0 °C
6. Highest set point: 35-90 °C, Standard is 35 °C
7. Lowest setpoint: 0-30 °C, Standard is 5 °C
8. Home mode setpoint: The standard is 22 °C
9. Setpoint for away mode: The default is 15 °C
10. Brightness in sleep mode: 1-10, default is 1
11. Open window detection: 0 = Disabled / 1 = Active
12. Restart the system:  
Press + or - to change '⏻' to '⊕' and wait for 5s
13. Reset to factory settings  
Press + or - to change '⏻' to '⊕' and wait for 5s

- You can change settings with '⊕' or '⊖'
- Press '⋮' to select the settings and proceed.
- To save the changes and exit advanced settings, press '⏻'.

## Functions

Button	Short press	Long press
⏻	Confirm/go back	Turn ON/OFF
⊕	Temperature increase	Enter menu
⊖	Temperature decrease	Start ZigBee pairing
⋮	Change between home and away mode	Display date in MM/DD format
Long press '⊕' and '⊖': Open advanced settings		
Long press '⊖' and '⋮': Lock/Unlock		

### Max guard function:

Menu 1 / 02 Max guard. Floor sensor must be installed. The thermostat will regulate according to the room sensor, but interrupt heating if the floor sensor exceeds the maximum guard temperature. Standard is 27°C. This setting can be changed under Menu 3.

There is also a maximum guard when the thermostat is set to floor sensor. The thermostat regulates according to the floor sensor, but will interrupt heating if the floor sensor exceeds the maximum guard temperature. Standard is 27°C. This setting can be changed under Menu 3.

To control the thermostat remotely it must be added to a ZigBee gateway

1. Start the process of adding new devices to your ZigBee gateway and follow the instructions.
2. To put the thermostat in pairing mode: Long press '⏻' until the ZigBee icon flashes
3. Continue the process of adding new devices to the app.

## Electrical data

- Power: 230 V / 50 Hz
- Circuit breaker: Max 16 A
- Maximum load: 3600 W
- 1-pole electronic relay
- Internal power supply with galvanic isolation
- Do not use self-regulating heating cable
- Do not use for contactor control

Futurehome AS

P.O Box 72, 0801 Oslo, Norway